



## Disassembly Instructions

There are 3 versions of the Snowball chair. All three Snowball's are available with or without arms, in four-point-to-the-floor, sled base and stool designs, freestanding, or connected. The standard width size of the Snowball range is 18", but is also offered in the 22" midsize and the 26" Bariatric. Included in the Snowball family is the Snowflake children's line. The Snowballs are also offered with several accessory options such as storage basket, foot rest, and tablet arm.

Recyclable Material (lbs) 

steel frame	9.40
plywood back	2.76
plastic seat	5.60

Total Weight 17.76



Snowball 1

Tools: Phillips head or Robertson screwdriver, box cutter knife, hammer or rubber mallet, pliers.

Skill Set: Good manual dexterity.

Estimated Time: 10min per chair.

### Steps:

#### 1. Back - 4min

On the Snowball 1 and 3, the back rest fastening plates are exposed at the rear of the back rest. Locate the four fasteners and unfasten. Remove back rest from the chair frame. For Snowball 2 lines and other custom orders, the fastening plates may be concealed behind upholstery. In this event, carefully cut through the upholstery on the back side of the back rest with a box cutter or sharp knife. Position the cuts to the left and right sides of the back rest (It may be helpful to locate the fastening plates by feel). Pull away upholstery on either side until fasteners are exposed. Once the fastening plate is sufficiently exposed, remove the back rest by unscrewing the four fasteners. Remove the back rest from the chair frame.

#### 2. Seat - 2min

Turn the chair upside down to access the underside of the seat panel. Locate the four fasteners located on the underside of the seat pan and unfasten. Remove the seat panel from the chair frame.

#### 3. Feet Glides - 1min

Once both the seat and back are removed from the frame, re-position the chair upside down to access glides. With pliers, firmly grasp the glide and wiggle upward until free. Repeat process for all four feet.

#### 4. Armrest - 2min

Place the chair frame on its side. With a rubber mallet or hammer, knock the underside of the arm rest. Continue to knock until the armrest is free from the frame. This process may require some force. Flip the chair to the opposing side and repeat the process.

#### 5. Upholstered components. - 5min

Remove staples from the underside of the seat pan with pliers. For seat back, make an incision around the perimeter of the panel approximately 3 inches from the bottom. Once you have cut all the way through, slip the upholstery cover off the plywood panel. Pry foam seating pads away from the plywood seat. Spec's most recent Snowball models may contain a recycled plastic seat.

Visit Spec's green news page at [specfurniture.com](http://specfurniture.com) and click on "End of Product Life Options" for recycling and biodegradation facilities near you.

### Family:



Snowball 2



Snowball 3



Stool



Hip Chair



Tablet



Snowflake

## Disassembly Instructions

### Storage Basket

There is a steel storage basket option which is recyclable. Remove the basket component at the beginning of the disassembly process. To remove the basket, simply unhook from the chair frame.



### Tablet

On all Snowball configurations, the tablet accessory is available. Remove the tablet component at the beginning of the disassembly process. For disassembly, locate the 8 fasteners on the underside of the tablet. For easier access to fasteners, flip the tablet surface up. Unfasten the screws and remove the tablet.



### Ganging Clip

The ganging clip is frequently used in order to organize and group multiple Snowball chairs. Before disassembling any chair components, remove these clips from all chairs. Simply un-clip from the chair frame.



### Foot Rest

The foot rest accessory is an integral part of the Snowball Hip chair. For disassembly, locate the 7 fasteners on the under side of the panel and unfasten.



### Connecting Bars

Separate the individual chairs and connecting tables before chair disassembly. To separate, locate the connecting rods and their corresponding fasteners. Unfasten screws and remove connecting rods from frame with the required screwdriver. In addition, all connecting tables should be disassembled by removing the table top with the required screwdriver.

